

# REPLACING A FAULTY IR125 or IR300 BULB

The bulbs used in the IR125/IR300 have a 2,000 hour life expectancy.

## IMPORTANT

**ONLY BEWATOR REPLACEMENT BULBS SHOULD BE USED IN THESE UNITS.**

**DO NOT TOUCH THE BULB GLASS ENVELOPE WITH BARE HANDS, ALWAYS USE THE PLASTIC SLEEVE SUPPLIED.**

It is recommended that the bulbs are not subjected to excessive vibration, as this will shorten their operational life.

The exchange bulb kit is supplied by **Bewator Ltd.**

PART No. **IR125BULB** or **IR300BULB** contains:-

1 x bulb.

1 x bulb replacement leaflet.

## Replacement Of Bulb

**Note:-** *Never replace bulb in wet conditions. Water inside the unit can cause serious damage.*

1. **SWITCH OFF MAINS SUPPLY**, allow the unit to cool down.
2. Unscrew the reflector.
3. Open the bulb packet and using the protective sleeve provided, remove the bulb.
4. Screw the bulb firmly into the bulb holder.
5. Remove the protective sleeve.
6. Refit the reflector, ensuring that the bulb does not get damaged.

**Note:-** *The reflector assembly has to be firmly tightened to ensure the unit stays fully weatherproof.*

**Contact, Customer Services:- Bewator Ltd, Albany Street, Newport, S. Wales, NP20 5XW, U.K**  
**Tel : +44 (0)1 633 821000, Fax : +44 (0)1 633 850893, Email : sales@bewator.co.uk**

Whilst every effort has been made to ensure that all information contained in this document is correct at the time of publication, Bewator reserve the right to change any information contained herein without prior notice.