

IR600 BULB REPLACEMENT INSTRUCTIONS

Do not subject the bulbs to excessive vibration, as this will shorten their operational life.
The replacement bulb kit is supplied by **BEWATOR Ltd**.
The bulbs used in the IR600 have an approximate life expectancy of 6,000 hours.

IMPORTANT

ONLY BEWATOR IR600 REPLACEMENT BULBS SHOULD BE USED IN THIS UNIT.

**DO NOT TOUCH THE BULB GLASS ENVELOPE WITH BARE HANDS, AS THIS
WILL EVENTUALLY BURN-OUT THE BULB FILAMENT.
ALWAYS USE THE PLASTIC SLEEVE SUPPLIED.**

ALWAYS REPLACE THE FUSE WHEN REPLACING A FAULTY BULB.

Packing kit **IR600BULB** contains:-

1 x IR600 high performance bulb.

1 x bulb replacement leaflet.

1 x ultra rapid 8 amp fuse - ***Must Be Used When Changing The Bulb.***

Replacement Of Bulb

Note:- *Never replace bulb in wet conditions. Moisture inside the unit can cause serious damage.*

1. **DISCONNECT MAINS SUPPLY, PRIOR TO COMMENCEMENT OF WORK.**
Ensure power cannot be reconnected.
2. Allow the unit to cool down sufficiently. Unscrew and remove the reflector. Remove old bulb.
3. Open the bulb packet and using the protective sleeve provided, remove the bulb. ***Do not touch glass.***
4. Carefully slot the new bulb firmly into the bulb holder.
5. Remove the protective sleeve.
6. Refit the reflector, ensuring that the bulb does not get damaged.

Note:- *To ensure the unit stays fully weatherproof, carefully and firmly tighten the reflector assembly.*

Contact, Customer Services:- **BEWATOR Ltd, Albany Street, Newport, S. Wales, NP20 5XW, U.K**
Tel : +44 (0)1 633 821000, Fax : +44 (0)1 633 850893, Email : SALES@BEWATOR.CO.UK

Whilst every effort has been made to ensure that all information contained in this document is correct at the time of publication, Bewator reserve the right to change any information contained herein without prior notice.